

D. Gillespie Designs

SCA-35 Capacitor Board R02

with **EFBTM**

PC Board Assembly

Thank you for purchasing our SCA-35 Capacitor Board with *EFB™. We feel it is the single most significant upgrade you can make to your SCA-35. It is designed to integrate easily into your amplifier without chassis modifications of any kind.

Upgrading your SCA-35 with the Capacitor / EFB board consists of two stages. The first, covered in this document, involves assembling the PC board. The second continues with installing the assembled PC board in the SCA-35, and is covered in a separate installation manual.


! Please note before continuing:

Proper Soldering is Vital

It is assumed that you possess the necessary skills and equipment to properly solder components to a printed circuit board. The majority of problems encountered after assembly are directly related to poor solder connections, such as “cold” joints, or solder “bridges” resulting in unintended connections between components.

Polarized Components

The electrolytic capacitors and diodes employed on the board are “polar”. Electrolytic capacitors have specific positive and negative leads, while diodes can only pass current in one direction, thus it is imperative that they be installed in the PC board in the correct orientation. Failure to do so can result in damage to the components, as well as failure of the board to function properly.

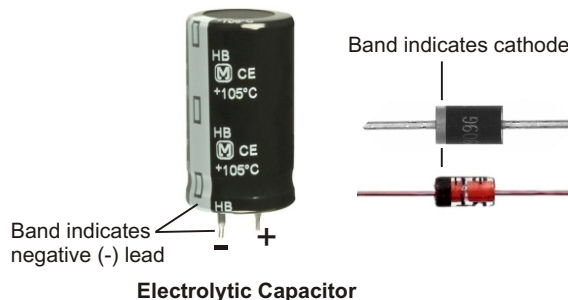

Color Coded Components

Most of the resistors on the board will be coded with colored rings which denote their value and tolerance. If you are not familiar with the color coding system it is advisable to check the value of each resistor with an ohmmeter before installing it in the board.

Assembly Procedure:

General Notes

When installing axial components, like resistors and diodes, for neatest appearance, pre-bend the leads with small needle-nosed pliers such that the leads align with the associated holes on the board. This will also allow the components to sit flat against the board when installed.



After inserting the component leads into the respective holes on the board, bend the leads outward slightly. This will prevent the component from falling out of the board when it is turned over for the soldering procedure.



- () Install Diodes D3, D4, D5, D6. **Be sure to install the diodes in the direction indicated by the cathode band on the board assembly diagram** . Solder the leads to the pads and trim excess lead length.
- () Install Diodes D1, D2. **Be sure to install the diodes in the direction indicated by the cathode band on the board assembly diagram**. Solder the leads to the pads and trim excess lead length.
- () Install the 0.5W metal film resistors R1, R2, R3, R4, R5. Solder the leads to the pads and trim excess lead length.
- () Install the 1W metal oxide resistors R6, R7, R38, R39, R40. Solder the leads to the pads and trim excess lead length.
- () Install the 2W metal oxide resistors R8, R9. Solder the leads to the pads and trim excess lead length.
- () Install the Trimmer Potentiometer P1. Solder the leads to the pads and trim excess lead length.

Assembly Procedure Ctd.


- () Install the Test Jacks LC, RC, COM. Solder the leads to the pads. It is not necessary to trim any excess lead length. Note: having only a single lead, the jacks will tend to fall out of the board when it is turned over to solder. You may find it helpful to secure the jacks to the top side of the board using small pieces of masking tape during the soldering process.
- () Install the 5W wire wound resistor R41. Solder the leads to the pads and trim excess lead length.
- () Install the 0.1uF/450V polypropylene capacitors C1, C2, C3. Solder the leads to the pads and trim excess lead length.
- () Install the 120uF/50V electrolytic capacitor C24D. **Be sure to install in the direction indicated by the + marking on the PC board and assembly diagram.** Solder the leads to the pads and trim excess lead length.
- () Install the 47uF/450V electrolytic capacitors C24A, C24C. **Be sure to install in the direction indicated by the + markings on the PC board and assembly diagram.** Solder the leads to the pads and trim excess lead length.
- () Install the 4.7uF/35V electrolytic capacitor C4. **Be sure to install in the direction indicated by the + marking on the PC board and assembly diagram .** Solder the leads to the pads and trim excess lead length. **Note: The lead spacing for this capacitor is very close. Be very careful to avoid creating a solder bridge between the connection pads. Confirm using a magnifying glass, if necessary.**
- () Install the 120uF/450V electrolytic capacitors C23A, C23B, C24B. **Be sure to install in the direction indicated by the + markings on the PC board and assembly diagram.** Note that these capacitors have “snap-in” type leads and thus will require a little effort to press into place. Solder the leads to the pads and trim excess lead length.
- () Mount the Voltage Regulator VR1 to the heatsink as shown in the assembly diagram . Apply a very thin coating of silicone grease to the back side of the regulator, then tighten the mounting screw securely. It is important to keep the regulator vertical while tightening so that it will properly align with the mounting holes on the board.
- () Install the heatsink / voltage regulator assembly on the board. Solder the large heatsink mounting lugs first, then the voltage regulator leads. Trim the excess lead length from the regulator. It will take a bit of manual dexterity to hold the heatsink flat to the board while soldering the large mounting lugs, as well as considerable heat from your soldering iron. If your iron has adjustable heat settings it is likely it will need to be set for max. and/or a larger solder tip installed. **Note: The lead spacing for the regulator is very close. Be very careful to avoid creating a solder bridge between adjacent pads. Confirm using a magnifying glass, if necessary.**
- () Install the four standoffs as shown in the assembly diagram. Tighten the screws securely.

Assembly of the EFB / Capacitor Board is now complete. It is highly recommended that you double check your assembly, especially the orientation of the polarized capacitors and diodes. Also check carefully for solder bridges between the leads of C4 and VR1.

Board Assembly

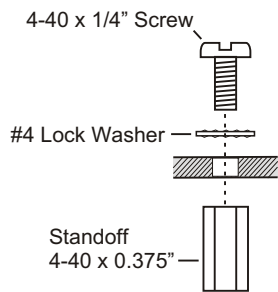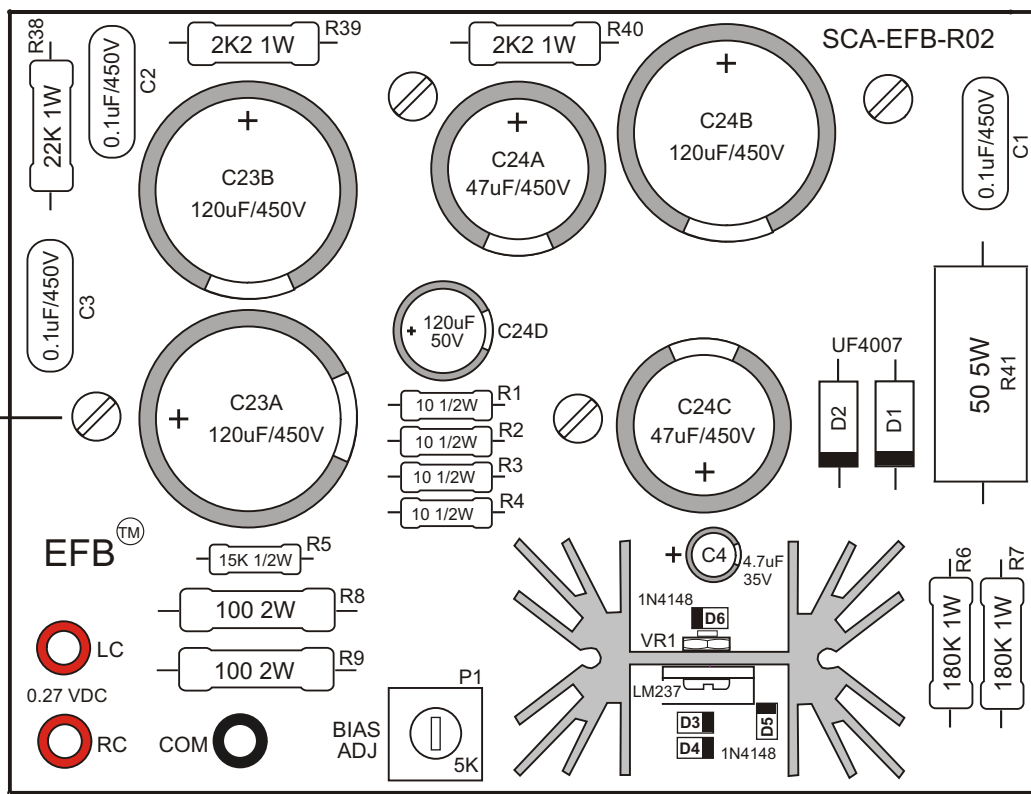


Standoff Assembly

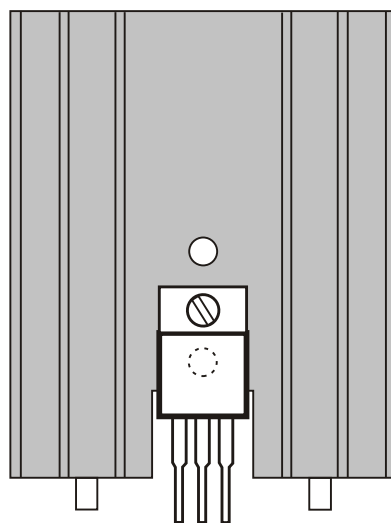

Heatsink Assembly

D. Gillespie Designs


SCA-35 Capacitor Board with EFBTM R02

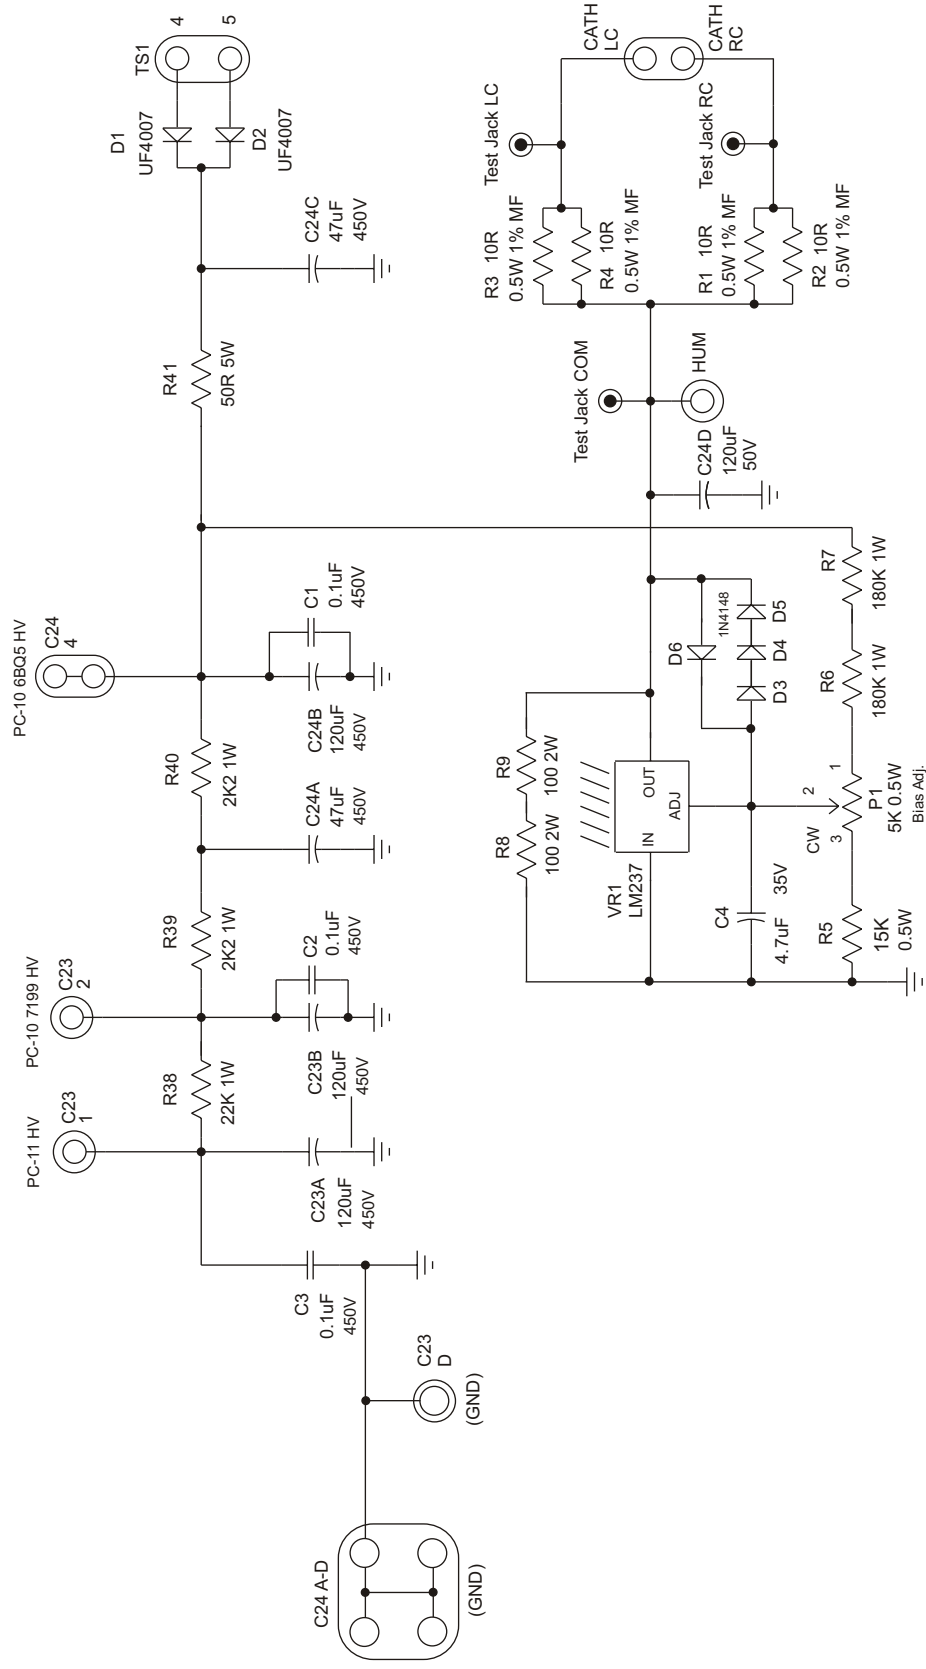

D. Gillespie Designs

SCA-35 Capacitor Board with EFBTM R02

Schematic of the SCA-35 with EFB™. Modifications are shown in red.

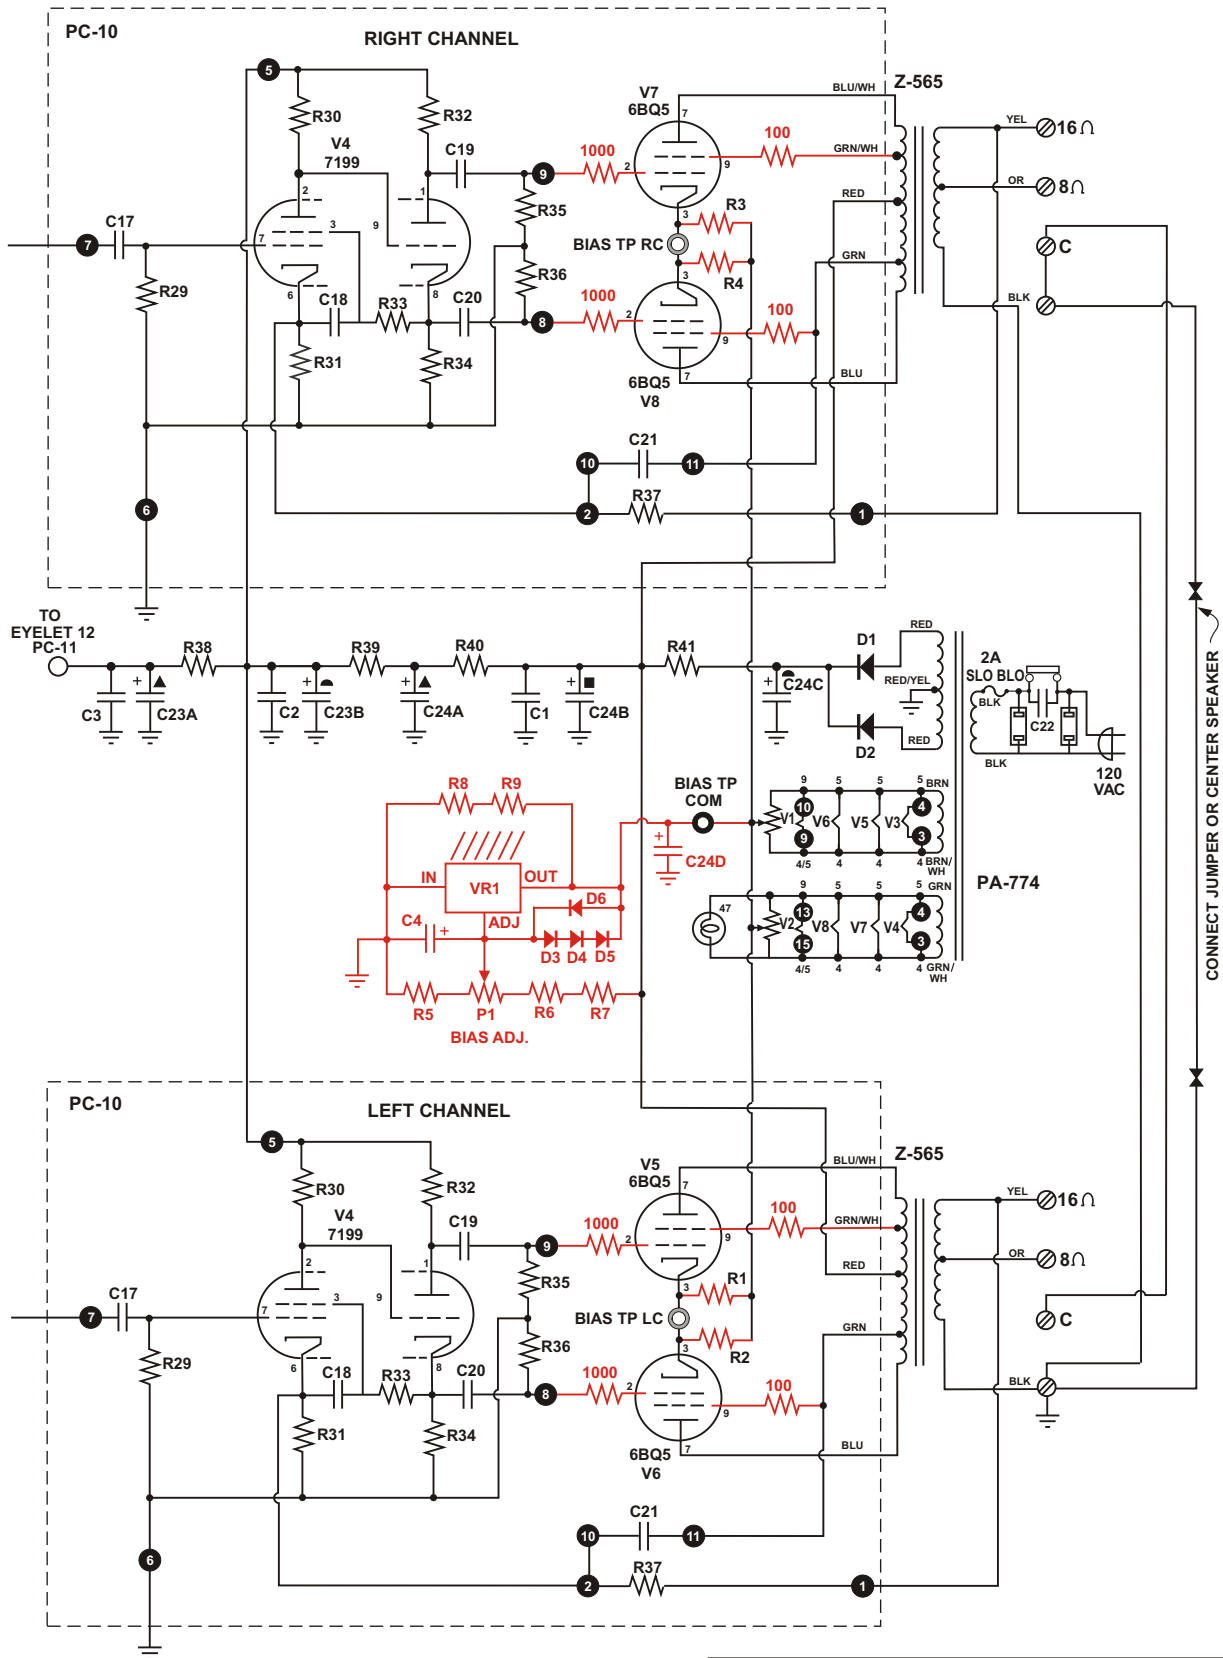

D. Gillespie Designs

SCA-35 Capacitor Board with EFB™ R2

ADDENDUM FOR INSTALLATION OF SCA-35 EFB POWER SUPPLY BOARD AND PC-10A POWER AMPLIFIER BOARDS

The Installation Manual for the SCA-35 EFB Power Supply Board and Assembly Manual for the PC-10A Power Amplifier Board were originally written separately, with the instructions in both manuals based on their respective boards being installed into an otherwise stock SCA-35 amplifier. However, when these boards are ultimately installed together in an SCA-35 either as part of an all encompassing complete restoration, or through separate service events ultimately pairing them together, confusion can arise between conflicting instructions regarding wiring of the output tube sockets with the PC-10A Power Amplifier boards. This addendum serves to eliminate the confusion in these instances. When both the SCA-35 EFB Power Supply and PC-10A Power Amplifier Boards are (ultimately) installed together in an SCA-35 Amplifier, please use the following as a guide:

- 1:** Follow the instructions in the EFB Power Supply Board Installation Manual for pins 8 and 9 of each output tube socket, including the installation of a 100 ohm .5W resistor between these pins at each socket.
- 2:** Follow the instructions in the EFB Power Supply Board Installation Manual for pin 2 of the output tube sockets for V5 and V7, including the installation of a 1000 ohm .5W resistor at this pin on these two sockets. These are the sockets closest to the middle of the board.
- 3:** Follow the instructions in the PC-10A Power Amplifier Board Assembly Manual for pin 2 of the output tube sockets for V6 and V8, including the installation of a 10K .5W resistor at this pin on these two sockets. These sockets are closest to the board's edge.

SCA-35 EFB[™] R02 Capacitor Board BOM

DESIGNATION	DESCRIPTION	QTY.	SOURCE/PART NUMBER	VALUE/NOTES
R1,2,3,4	Resistor, Metal Film	4	tubedepot.com R-273 Series	10 Ohms / 0.5W / 1%
R5	Resistor, Metal Film	1	tubedepot.com R-273 Series	15K / 0.5W / 1%
R6, R7	Resistor, Metal Oxide	2	tubedepot.com R-261 Series	180K / 1W / 5%
R8, R9	Resistor, Metal Oxide	2	tubedepot.com R-262 Series	100 Ohms / 2W / 5%
R38	Resistor, Metal Oxide	1	tubedepot.com R-261 Series	22K / 1W / 5%
R39, 40	Resistor, Metal Oxide	2	tubedepot.com R-261 Series	2K2 / 1W / 5%
R41	Resistor, Wirewound	1	tubedepot.com R-CR5	50 Ohms / 5W / 5%
P1	Potentiometer, Trimmer	1	Digikey # 3386P-502LF-ND Mouser # 652-3386P-1-502LF	5K / 0.5W / ST
D1, D2	Diode, Rectifier	2	Digikey # UF4007CT-ND	1000V / 1A
D3, D4, D5, D6	Diode, Signal	4	Digikey # 1N4148FS-ND	100V / 300mA
C1, C2, C3	Capacitor, Polypropylene	3	Digikey # P16729CT-ND	0.1uF / 450V / 105C
C4	Capacitor, Electrolytic	1	Digikey # 493-1889-ND Mouser # 647-UVZ1V4R7MDD1TD	4.7uF / 50V / 105C
C23A, C23B, C24B	Capacitor, Electrolytic	3	Digikey # 1189-2857-ND Mouser # 647-LGU2W121MELZ	120uF / 450V / 105C
C24A, C24C	Capacitor, Electrolytic	2	Digikey # P13678-ND Mouser # 667-EEU-EE2W470S	47uF / 450V / 105C
C24D	Capacitor, Electrolytic	1	Digikey # P11255-ND Mouser # 667-EEU-FC1H121	120uF / 50V / 105C
VR1	Voltage Regulator, Adjustable	1	Digikey # LM337T-ND Mouser # 863-LM337TG	LM337 / 1.5A
LC, RC	Test Jack, Insulated, Red	2	Digikey # J120-ND Mouser # 530-105-0852-1	
COM	Test Jack, Insulated, Black	1	Digikey # J121-ND Mouser # 530-105-0853-1	
None	Heatsink, Aluminum, TO-220, 2"	1	Digikey # FA-T220-51E-ND Mouser # 588-FA-T220-51E	! Do not Substitute
None	Standoff, Alum., 4-40 x 0.375"	4	Digikey # 36-2202-ND Mouser # 534-2202	
None	Machine Screw, 4-40 x 1/4" Pan Head Slotted	9	Digikey # H142-ND	* Min QTY 100 Check local HW stores
None	Hex Nut, 4-40 x 1/4"	1	Digikey # H216-ND	* Min QTY 100 Check local HW stores
None	Lock Washer, Internal Tooth, #4	9	Digikey # H236-ND	* Min QTY 100 Check local HW stores
None	Thermal Grease		Digikey # 345-1006-ND	

NOTE: In addition, you will also require four 100 ohm/0.5W and four 1K/0.5W resistors to be used in modifying the stock PC-10 output boards as part of the EFB implementation. If your SCA-35 has been, or will be, updated with PC-10A output boards, then you will also require four 10K/0.5W resistors. The resistors are R-273 series from tubedepot.com.